
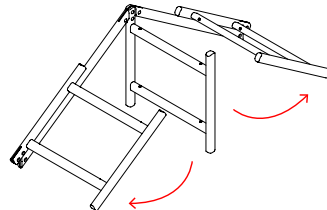




# KADAM LOW STORAGE

Instructions

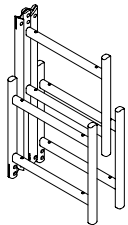

1. Remove the closed Low Storage from the cardboard.

2. Open by pushing outward, the bottom outer legs first.

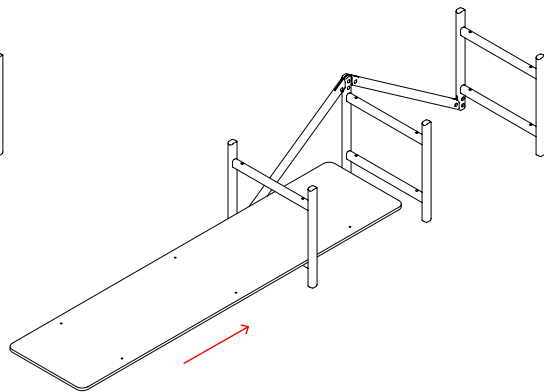
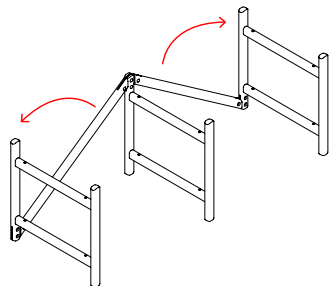


3. Open pushing outward the upper external legs.

4. Slide in the first shelf starting from the bottom position.


# KADAM LOW STORAGE

Instructions

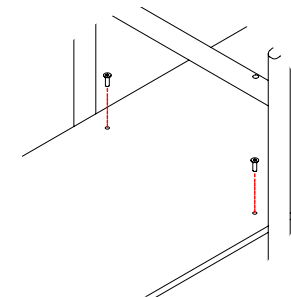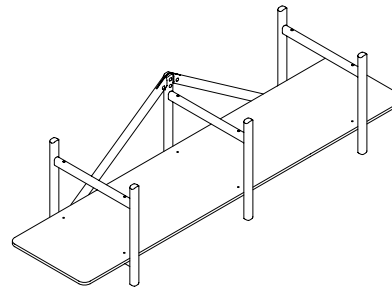

5. When the shelf is in place, fix the screws in all six holes, loosely.

NOTE: At this step the screws must be not tight.

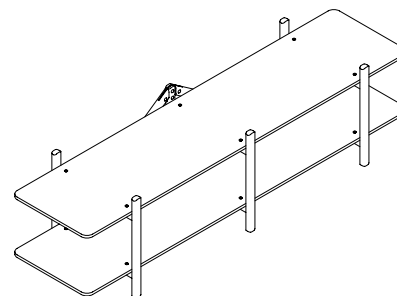

6. Repeat step 4 and 5 for the top shelf. Then tighten all screws.

*For care and maintenance instructions specific to this product, please refer to our website.*